 


Operation instructions for FJ65DCO

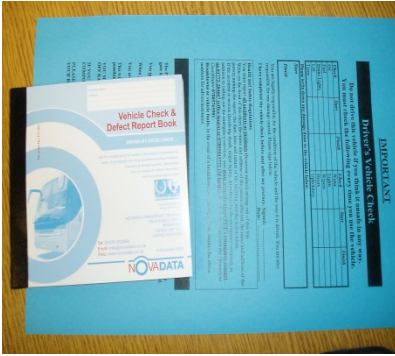

It is Your Legal Duty to carry out a walk round check and complete the Defect Report / reverse of the GT Blue sheet. Being a volunteer or arriving at the vehicle late are not excuses. If something goes wrong and you haven't done this, the fault is yours.



VEHICLE LOG SHEET: Please complete for every trip. Date/Name of group/trip/route/ Start and Finish Mileage/Drivers initials.

This data is critical for our monitoring and takes ages to track down afterwards. Thanks.



Bonnet release lever, inside passenger door, on side of dash. Bonnet catch can be found in centre of bonnet, see below.



Position of the bonnet release catch, it's in-line with the Fiat badge. Lift lever and pull bonnet up, secure it with the handle on right hand side.



All the tanks to check. In the far left hand corner you can just see a purple cap cover, this is the screen-wash reservoir. Coolant, then brake fluid.



Oil dipstick – you'll have to lean in slightly to see it.



PASSENGER SAFETY HANDLES – release lever. There are two at the side door. Pull black button out making sure you hold on with other hand to lower down. To stow it, pull black button out again.

WARNING. The handle will fall down if released without holding on to it.



PASSENGER DOOR STEP.

To open pull black handle on the left while pulling the strap toward you.

WARNING. This is a really heavy piece of kit, keep legs out of the way.



TAIL LIFT: In order for the tail lift to work, this isolator must be switched on (down). In this picture it is off.

It's important to SWITCH OFF THE ISOLATOR after use or the battery will drain and you will be unable to use the lift.



With the isolation switch on, use your foot to lift up the red handle on the side of the lift. Keep this raised while you activate the control stalk...

 


...with your foot still lifting up the red handle, press the up button on the control stalk. As soon as the lift starts to deploy, move your foot out of harms' way.

Continue to deploy the lift as normal.




The maximum weight the tail lift can handle is 400 Kgs (62 Stone). That is the combined weight of the person(s) and the chair. Be aware of this max weight limit if a Carer is trying to get on the lift too.

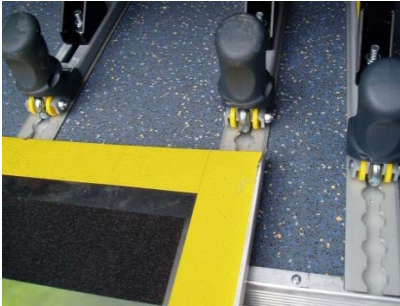

If you are using the tail lift solely to board a passenger who can walk and not using it to load a wheelchair: you will need to move the centre rear seat forwards to accommodate the large bridging plate.



 The box holding all the WHEELCHAIR RESTRAINT EQUIPMENT AND WEBBING is found above the passenger seat at the front of the bus. The next picture shows all the items which should be on FJ65DCO.

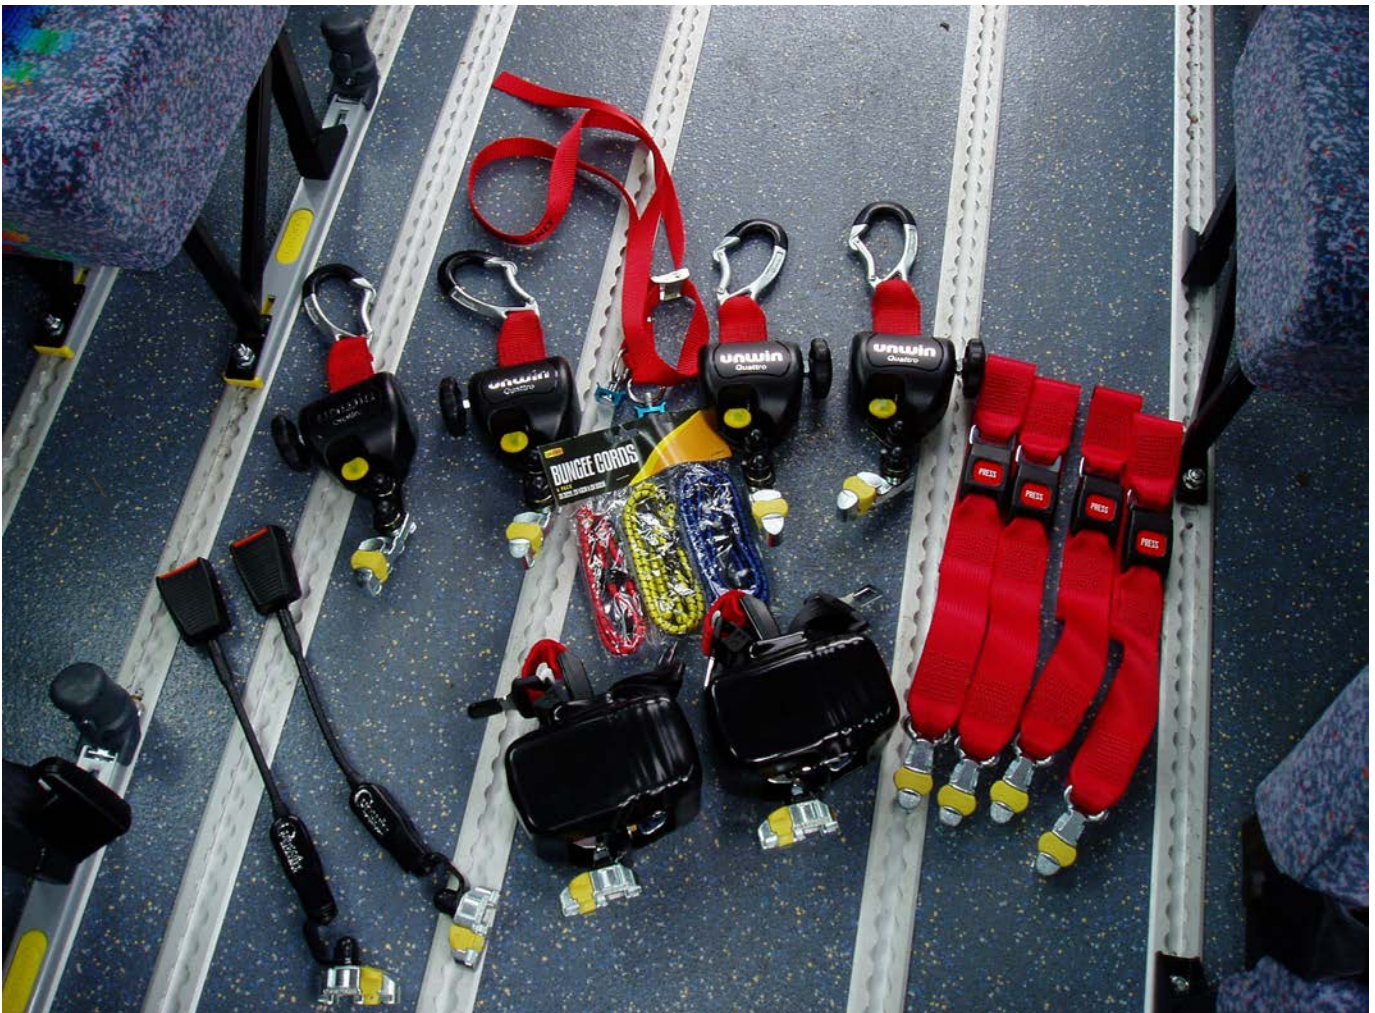



SEAT RELEASE MECHANISM. Press silver button in and pull the lever back all the way. Tip seat forward to remove. To replace seat make sure lever is fully back, front legs are lined up in tracking and place back end in, push lever forward. Test seat is secure by shaking it strongly, before setting off.



Unlocked.

SLIDING WINDOWS

Locked.



DIESEL FILLER CAP. Near side.

Ensure that both the engine AND the cabin heater are off when fuelling.

When the first click happens to indicate the tank is full, give it a couple of seconds, then continue fuelling until the second click.



REVERSING CAMERA MONITOR: will activate when reverse gear selected. At all other times this functions as your internal mirror.

Someone asked if this is a games console...no, it isn't.



CAB HEATER SWITCH: press wavy lines button to turn on heat and fan symbol for “ventilation”. Press it a second time to turn off. Arrow keys up or down to desired temperature. Switch heater off at end of trip, day and when fuelling.



CLEANING: you can use this brush to sweep off the seats, tracking and floor. This picture shows a storage tray underneath the driver seat.

 


EXTINGUISHER is in the front passenger seat foot well. There are two first aid kits, one above the driver and another in the passenger door pocket.



JUMP-START point for the negative terminal of the jump pack / leads.

Attach the crocodile clips to the screw which is standing proud.

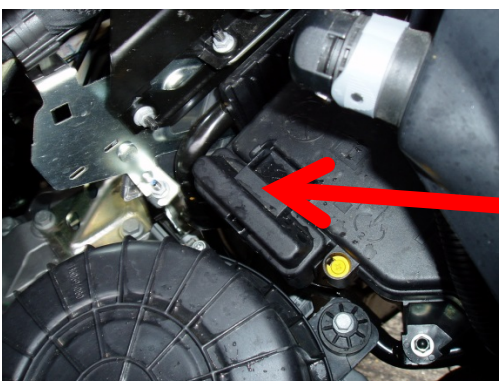


JUMP-START point for the positive terminal of the jump pack / leads.

You need to unclip this plastic cover to reveal the metal terminal point, attach the crocodile clips to this.



TYRE SIZE: 225/75 R 16 C.

 Tyre Pressure: 55 psi.

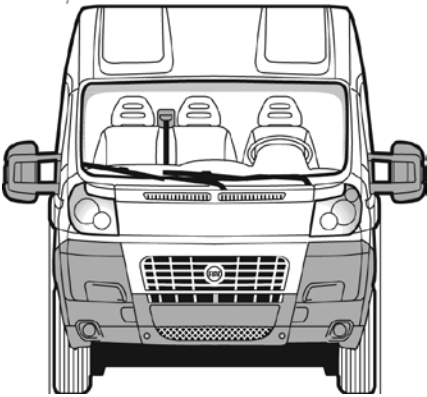

HEIGHT: 8ft 10in / 2.7 metres.

WIDTH: 6ft 6in / 2 metres.

LENGTH: 18ft 4in / 5.6 metres.